Copyright © *EURO-PRO* OPERATING LLC 2008

IMPORTANT

Shark
CORDLESS
VX33

Model: SV769
16.8 V DC

To Maximize the life of your NiCd batteries:

1. **Charge for a minimum of 20 hours before initial use.** Failure to do so will reduce the product's battery life significantly.
2. Do not store unit with the charging adapter attached and plugged in.
3. Only recharge when the batteries are fully discharged (or as close to fully discharged as possible).
4. Do not store in areas of high temperature or humidity.
5. After 3 months of non-use, the product should be fully discharged and then recharged to maximize battery power.
6. Use only the charger supplied with the product. If other chargers are used, the batteries can fail causing damage to the battery, product, or personal property.

NiCd batteries have a long useful life but at some time they will need to be replaced. To purchase replacement batteries, visit **www.sharkvac.com**

Note:
1. The On/Off switch must be in the "Off" position in order to charge the unit. If the charging indicator does not light, press the On/Off switch to the "OFF" position.
2. If the product has never been used or has been stored for an extended period of time without use – it will take several complete charge and discharge cycles to realize the full operational time of your product.

EURO-PRO Operating LLC
Boston, MA, 02465
Tel. : 1 (800) 798-7398
www.sharkvac.com

EURO-PRO

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be observed, including the following

READ ALL INSTRUCTIONS BEFORE USING YOUR CORDLESS HAND VACUUM.

WARNING: To reduce the risk of fire, electrical shock, or injury:

1. **Do not** charge this unit outdoors.
2. **Do not** use outdoors or on wet surfaces.
3. **Do not** allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual. Use only manufacturer's recommended attachments.
5. **Do not** use charger if power cord has been damaged. Do not use cordless hand vacuum or charger if it has been dropped, damaged, left outdoors, or dropped in water. Return it to ***EURO-PRO Operating LLC*** for examination, repair or adjustment.
6. **Do not** abuse the charger cord. Never carry the charger by the cord or yank to disconnect from an outlet; instead grasp the plug and pull to disconnect.
7. Keep charger cord away from heated surfaces.
8. This product includes rechargeable nickel cadmium batteries. Batteries must be recycled or disposed of properly. **Do not incinerate batteries or expose to high temperatures**, as they may explode.
9. **Do not** handle plug or appliance with wet hands.
10. **Do not** put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
11. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
12. **Do not** pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
13. **Do not** attempt to change accessories while unit is running.
14. Use extra care when cleaning on stairs.
15. **Do not** use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
16. Look on your hand vacuum and follow all label and marking instructions.
17. **Do not** use charger with an extension cord. Plug charger directly into an electrical outlet. Use charger only in a standard (120V., 60Hz) electrical outlet.
18. **Do not use the hand vacuum cleaner without filter in place.**
19. Store the cordless vacuum indoors. Put the cordless vacuum away after use to prevent accidents.
20. Leaks from battery cells can occur under extreme conditions. If the liquid, which is 20-35% solution of potassium hydroxide, gets on the skin - wash immediately with soap and water or neutralize with a mild acid such as lemon juice or vinegar. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention.
21. Use only on dry, indoor surfaces.
22. **Do not** use for any purpose other than described in this user's guide.
23. **Do not** attempt to use the charger with any other product nor attempt to charge this product with another charger. **Use only the charger model AD-2420-UL (9) supplied with this appliance.**
24. The appliance must be disconnected from the supply when removing the battery.
25. "Ni-Cd" battery must be recycled or disposed of properly.



SAVE THESE INSTRUCTIONS

For Household Use Only

PARTS AND COMPONENTS

1. Handle
2. Main Unit
3. Power On/Off Switch
4. Charging Indicator Light
5. Dust Cup Release Button
6. Filter
7. Dust Cup (Container)
8. Motorized Brush
9. Crevice Tool
10. Charging Adapter (AD-2420-UL (9))
11. Charging Stand

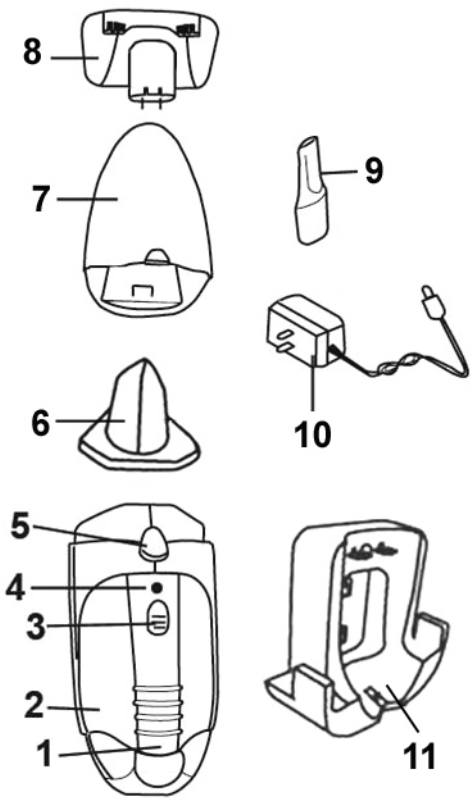

Technical Specifications

Voltage: 16.8 Volts DC

***Illustrations may differ from actual product**

NOTE: **Cordless vacuum Model SV769 is shipped with the batteries uncharged. Charging of the unit for 20 hours prior to first use is required.**

Before Use

Note: Ensure that the On/Off switch is in the "Off" position before charging.
Note: Peak performance may only be realized after the unit has been charged and discharged two (2) or three (3) times.
IMPORTANT: To maintain peak performance of your cordless hand vacuum, it is recommended that the unit be fully discharged, then completely re-charged at least once a month.

Charging Your Vacuum Cleaner

1. Place the charging base near an electrical power outlet (120 V., 60 Hz.) and plug in the charging adapter's jack into the charging base.
2. Plug the charger into wall outlet.
3. Place the unit in the charging base. The charging indicator light will shine green to indicate that the vacuum cleaner is properly positioned in the charging base and that the unit is being charged. (Fig. 1)

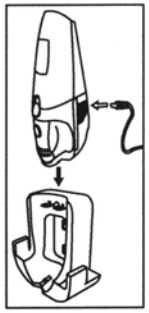

Fig. 1

Note: Ensure that the On/Off switch is in the "Off" position before charging.

Wall Mounting Bracket (Optional)

1. Make sure that the intended wall area for the wall mounting bracket to be drilled is free from any hidden electrical wires, water pipes and gas lines.
2. Select an appropriate place close to a wall power outlet (120V., 60 Hz).
3. Do not mount near direct sunlight, near a heat source or outdoors.
4. Select an appropriate drill type for the material to be drilled.
5. Carefully measure and mark the location of all bracket holes and then drill holes and screw the wall mounting bracket onto the wall.

To Maximize the Life of your Ni-Cd Batteries

1. Charge for a minimum of 20 hours before initial use. Failure to do so will reduce the product's battery life significantly.
2. **Do not store the unit with the charging adaptor attached and plugged in**.
3. Only recharge when the batteries are fully discharged (or as close to fully discharged as possible).
4. **Do not** store in areas of high temperature or humidity.
5. Fully discharge, then completely re-charge the unit at least once a month.
6. After three (3) months of storage, the product should be fully discharged and then recharged to maximize battery power.
7. **Use only** the charger supplied with the product. If other chargers are used, the batteries can fail causing damage to the battery, product or personal property.
8. Ni-Cd batteries have a long useful life but at some time they will need to be replaced. To purchase replacement batteries visit www.sharkvac.com.

Note:

1. The on/off switch must be in the "Off" position in order to charge the unit. If the charging indicator does not light, verify that the on/off switch is in the "Off" position.
2. If the product has never been used or has been stored for an extended period of time without use – it will take several complete charge and discharge cycles to realize the full operational time of your product.

CAUTION:

- **Use only** with the battery pack supplied with the unit.
- **Do not** attempt to remove the battery pack from the unit to charge it.
- Never attempt to throw the battery pack or unit into a fire or incinerate it.
- **Do not** attempt to remove or damage the battery casing.

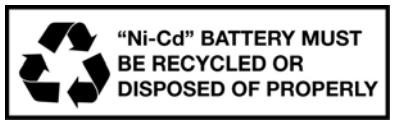

Battery Pack Replacement & Disposal

WARNING: NEVER use ordinary batteries for replacement, as these may leak and damage your vacuum cleaner. Use only battery pack provided by ***EURO-PRO Operating LLC*** for replacement.
This vacuum cleaner contains nickel-cadmium (Ni-Cd) batteries, which must be recycled or disposed of properly in accordance with state, federal and local laws. Call your nearest recycling center for information on the recycling and disposal of nickel-cadmium (Ni-Cd) batteries.
If uncertain as to how to remove the battery pack, we suggest you take your hand vacuum to a reputable small appliance service technician to have this service preformed.
The battery pack of your SV769 is replaceable, however care should be taken when doing so. Follow these steps when replacement is required:

1. Open the battery pack compartment by removing the single Phillips head screw located in the recess on the bottom of the unit. **NEVER** open the battery compartment except to change the battery pack when required.
2. Remove battery compartment cover. Set aside battery compartment cover with the screw.
3. Slide the battery holder to the left and lift out. (Fig. 2)

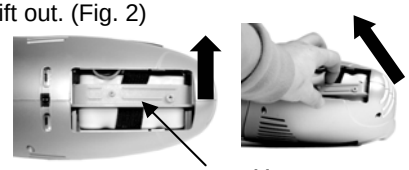

Fig. 2

4. Use the strap around the battery pack (A) to pull out. Remove battery pack (B) from the side compartment.
5. Carefully detach the two (2) electrical connectors from the battery pack by pulling straight out. (Fig. 3)
6. Reconnect the terminals matching red with red and black with black to the new battery pack.

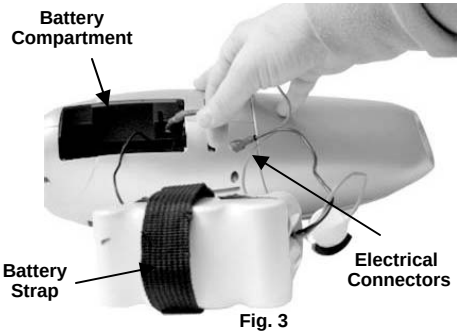

Fig. 3

7. Replace strap around new battery pack (A).
8. First insert batteries (B) into side compartment, inside the battery compartment. (Fig. 4)

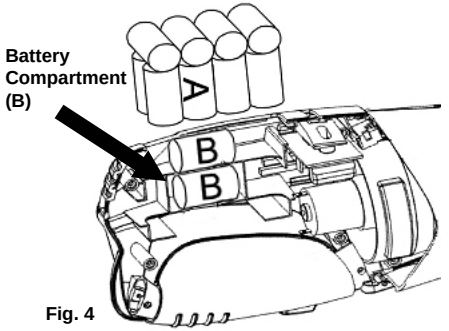

Fig. 4

9. Tuck the wiring inside the battery compartment so that the wiring does not interfere with the battery compartment cover when it is replaced.
10. Turn battery pack (A) sideways and replace in unit.
11. Re-install the battery holder in the battery compartment.
12. Re-install the cover by placing it over the battery inserting the tab towards the front of the unit, making sure that the back snaps, engaging the body of the unit.
13. Replace the battery compartment cover screw.

CAUTION: NEVER use the unit without the battery compartment cover in place.
Note: Any other servicing should be performed by an authorized service representative.

OPERATING INSTRUCTIONS

Assembly

Note: The filter must always be used when operating the hand vacuum.

1. To open the dust cup container, press the dust cup release button and remove the dust cup container. (Fig. 5)

Fig. 5

2. Verify that the filter is inside, then re-attach the dust cup container to the hand vacuum. (Fig. 6)


Fig. 6

3. To attach the crevice tool to the hand vacuum, push the attachment into the suction hole in the front of the dust container. (Fig. 7)


Fig. 7

CAUTION: The suction inlet must be open and free of any obstructions at all times. Otherwise, the motor will overheat and could become damaged.

Using Your Motorized Brush

1. Make sure that the vacuum is in the "Off" position.
2. Firmly insert the motorized brush (Fig. 8) into the air-intake nozzle of the dust cup container ensuring that the contact pins are engaged in the connector slots of the unit. (Fig. 9)



Fig. 8

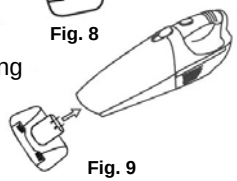
Fig. 9

Note: This motorized brush is for vacuuming short pile carpets, rugs or upholstery.

WARNING: **Do not touch the motorized brush while it is in motion.**

Using Your Cordless Vacuum

1. Unplug unit from charger.
2. To start the unit, slide the "On/Off" switch to the "On" position.
3. To stop the hand vac, slide the "On/Off" switch to the "Off" position.
4. A crevice tool is provided for cleaning narrow, hard to reach places. A motorized brush is provided for cleaning low pile carpets or upholstery.

Changing & Cleaning the Filter

To achieve the best performance, empty the dust cup container and clean the filter after each use.

1. To remove the dust cup container, press down on the dust cup release button and pull off the dust cup container.
2. Pull out the filter.
3. Empty the dust from the dust cup container. (Fig. 10)

Fig. 10

4. Rinse the filter in cold water, and then wait until it air dries completely before replacing it back into the dust cup container. Do **not** use a washing machine to clean the filter. Do not use a hair dryer to dry it. **Air dry only.**

CAUTION: The suction hole must be open, free of any obstructions at all times. Otherwise, the motor will overheat and could become damaged.

Warning: Always empty the dust cup container and clean the filter before each use and during prolonged usage. Never over fill the dust cup (container) - remove dirt and clean the filter and frequently during prolonged usage or risk motor damage.

If you wash the filter, make sure that it is completely air dry before inserting back in the vacuum.

Note: The filter is washable. It should, however, be replaced every three (3) to six (6) months, depending on usage to ensure peak performance of your vacuum.

OPERATING INSTRUCTIONS

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
HAND VACUUM WILL NOT OPERATE	1. Batteries discharged. 2. No power in electrical outlet supplying transformer.	1. Charge unit. 2. Check fuse or breaker. Replace fuse/reset breaker.
HAND VACUUM WILL NOT PICK-UP OR SUCTION POWER IS WEAK	1. Dust cup container is full. 2. Filter needs cleaning or replacement. 3. Unit needs recharging.	1. Empty dust cup container 2. Remove filter and check for object(s) in air duct and remove. Clean or replace filter. 3. Charge unit.
MOTORIZED BRUSH WILL NOT WORK	1. The 2 metal pins of the motorized brush are not in contact with the vacuum cleaner. 2. Motorized brush is clogged up.	1. Firmly insert the motorized brush into the air-intake nozzle. This will connect the motorized nozzle to the unit power supply. 2. Remove all lint, hair etc. from motorized brush.
DUST ESCAPING FROM HAND VACUUM	1. Dust cup container is full. 2. Filter is not installed correctly. 3. Puncture/hole in filter.	1. Empty dust cup container. 2. Review the filter installation instructions. 3. Replace the filter.

REPLACEMEN PARTS FOR MODEL SV769

Replacement dust cup filter SKU# XF769
Replacement battery pack SKU# XB768

To order replacement batteries or filters or for technical support:
Call: 1 (800) 798-7398
Monday to Friday 8:30 A.M. - 5:00 P.M. Eastern Standard Time
or
visit our website: www.sharkvac.com

Please Note:	The filter is washable. It should, however, be replaced every three (3) months to ensure peak performance of your vacuum.
Important:	**Make sure that filter has completely air dried before re-installing back in the hand vacuum.**

Model
SV769

EURO-PRO

ONE (1) YEAR LIMITED WARRANTY

EURO-PRO Operating LLC warrants this product to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase, when utilized for normal household use, subject to the following conditions, exclusions and exceptions.

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, return the complete appliance and accessories. For Customer Service support, call 1 (800) 798-7398 or visit our website www.sharkvac.com.

If the appliance is found to be defective in material or workmanship, ***EURO-PRO Operating LLC*** will repair or replace it free of charge. Proof of purchase date and $5.95 to cover the cost of return shipping and handling must be included. *

Non-durable parts including, without limitation, filter, brush and electrical parts, which normally require replacement are specifically excluded from warranty.

The liability of ***EURO-PRO Operating LLC*** is limited solely to the cost of the repair or replacement of the unit at our option. This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This limited warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit. This warranty does not cover damage or defects caused by or resulting from damages from shipping or repairs, service or alterations to the product or any of its parts, which have been performed by a repair person not authorized by ***EURO-PRO Operating LLC***.

This warranty is extended to the original purchaser of the unit and excludes all other legal and/or conventional warranties. The responsibility of ***EURO-PRO Operating LLC*** if any, is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. **In no event** is ***EURO-PRO Operating LLC*** liable for incidental or consequential damages of any nature whatsoever. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

***Important:** **Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE". We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.**

OWNERSHIP REGISTRATION CARD
FOR CANADIAN CONSUMERS ONLY

Please fill out and mail the product registration card within ten (10) days of purchase. The registration will enable us to contact you in the unlikely event of a product safety notification. By returning this card you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions.

RETURN TO *EURO-PRO Operating LLC*, 4400 Bois Franc, St. Laurent, QC, H4S 1A7

SV769

Appliance model _____

Date purchased _____ **Name of store** _____

Owner's name _____

Address _____ **City** _____ **Prov.** _____ **Postal Code** _____

MEDIDAS IMPORTANTES DE SEGURIDAD

Al usar aparatos eléctricos, siempre debe seguir precauciones básicas de seguridad, incluyendo las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USAR SU ASPIRADORA INALÁMBRICA DE MANO

ADVERTENCIA: Para reducir el riesgo de incendio, descarga eléctrica o daños personales:

1. **No** recargue esta unidad en el exterior.
2. **No** la utilice en el exterior o en superficies húmedas.
3. **No** permita que se utilice como un juguete. Debe tener mucho cuidado al ser utilizada por o cerca de niños.
4. Utilícela solamente como se indica en este manual. Use únicamente los accesorios recomendados por el fabricante.
5. **No** use el cargador si el cable de alimentación está dañado. No utilice la aspiradora inalámbrica o el cargador si se han caído, dañado, dejado en el exterior o tirado al agua. Retórnela a ***EURO-PRO Operating LLC*** para que sea examinada, reparada o ajustada.
6. **No** maltrate el cable del cargador. Nunca levante el cargador por el cable, o tire del cable para desconectarlo del tomacorriente; agárrelo por el enchufe y tire para desconectarlo.
7. Mantenga el cargador alejado de superficies calientes.
8. Este producto incluye baterías recargables de níquel cadmio. Las baterías deben descartarse o reciclarse de forma apropiada. **No arroje las baterías al fuego o las exponga a altas temperaturas**, pueden explotar.
9. **No** toque el enchufe o el artefacto con las manos húmedas.
10. **No** introduzca ningún objeto en las ranuras. No la use con ninguna abertura tapada; manténgalas libres de polvo, pelusa, pelos y cualquier otra cosa que pudiera reducir el flujo de aire.
11. Mantenga el cabello, la ropa suelta, los dedos y toda parte del cuerpo alejados de las aberturas y de las partes móviles.
12. **No** recoja nada que se esté quemando o echando humo, como cigarrillos, fósforos, o cenizas calientes.
13. **No** intente cambiar ningún accesorio mientras la unidad está funcionando.
14. Tenga especial cuidado al limpiar escaleras.
15. **No** la use para recoger líquidos inflamables o combustibles como gasolina ni la use en áreas donde puedan estar presentes.
16. Trabe su aspiradora de mano y siga todas las instrucciones de las etiquetas.
17. **No** utilice el cargador con un cable de extensión. Enchufe el cargador directamente en un tomacorriente. Use el cargador únicamente en un tomacorriente común (120V, 60Hz).
18. **NO use la aspiradora de mano sin tener el filtro en su lugar.**
19. Guarde la aspiradora inalámbrica dentro de su casa. Guarde la aspiradora inalámbrica luego de cada uso para evitar accidentes.
20. Bajo condiciones extremas, las baterías pueden presentar pérdidas. Si el líquido, que es una solución de 20-35% hidróxido de potasio, entra en contacto con la piel, lávese inmediatamente con agua y jabón o neutralícelo con un ácido suave como jugo de limón o vinagre. Si el líquido le entra en los ojos, enjuáguelos inmediatamente con agua limpia durante 10 minutos como mínimo y vea un doctor.
21. Úsela solamente en superficies secas, en interiores.
22. **No** la utilice con ningún propósito que no esté descrito en este manual del usuario.
23. **No** intente usar el cargador con ningún otro producto ni intente recargar este producto con otro cargador. **Use únicamente el cargador modelo AD-2420-UL (9) suministrado con este artefacto.**
24. Este artefacto debe desenchufarse del tomacorriente antes de quitarle la batería.
25. Las baterías de "Ni-Cd" deben descartarse o reciclarse de forma apropiada.

LA BATERÍA DE "Ni-Cd" DEBE DESCARTARSE O RECICLARSE EN FORMA APROPIADA

CONSERVE ESTAS INSTRUCCIONES
Para Uso Doméstico Solamente

PARTES Y COMPONENTES

1. Mango
2. Unidad Principal
3. Llave de Encendido ON/OFF
4. Luz Indicadora de Carga
5. Botón para Destrabar el Recipiente de la Tierra
6. Filtro
7. Recipiente para Tierra
8. Cepillo Eléctrico
9. Cabezal Esquinero
10. Cargador (AD-2420-UL (9))
11. Soporte de Carga

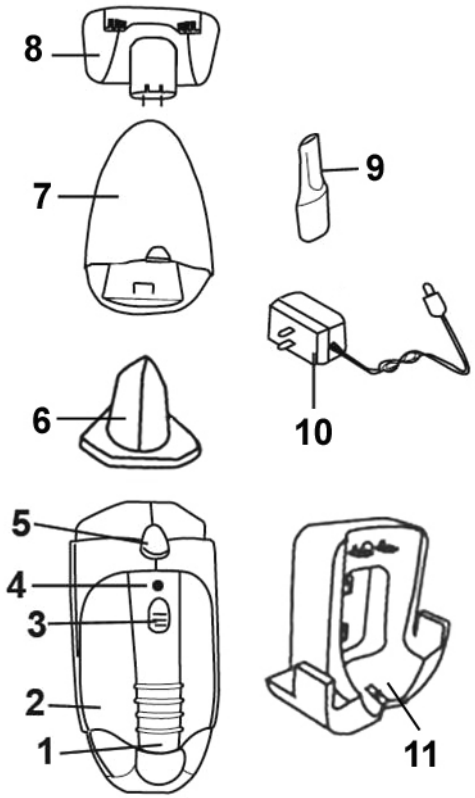

Especificaciones Técnicas

Voltaje: 16.8 V. DC

***Las ilustraciones podrían variar del producto actual.**

Nota: La aspiradora inalámbrica Modelo SV769 viene con la batería descargada. Necesita cargar la unidad por 20 horas antes de usarla por primera vez.

INSTRUCCIONES DE USO

Antes de Empezar

Nota: Verifique que la llave de encendido esté en la posición "Off" (apagado) antes de cargarla.

Nota: Se alcanzará el rendimiento máximo únicamente luego de haber cargado y descargado la unidad dos (2) o tres (3) veces.

IMPORTANTE: Para mantener el máximo rendimiento de su aspiradora inalámbrica, se recomienda descargar completamente la unidad, luego recargarla completamente por lo menos una vez por mes.

Para Cargar su Aspiradora

1. Coloque el soporte de carga cerca de un tomacorriente (120V, 60Hz) y enchufe el adaptador en el conector del soporte de carga.
2. Enchufe el adaptador al tomacorriente.
3. Coloque la unidad sobre el soporte de carga. La luz indicadora de carga se encenderá verde para indicarle que la aspiradora está colocada correctamente en el soporte cargador y que se está cargando. (Fig. 1)

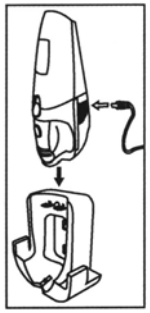

Fig. 1

Nota: Verifique que la llave de encendido esté en la posición "Off" (apagado) antes de cargarla.

Soporte de Montaje de Pared (Opcional)

1. Asegúrese de que la pared a perforar para el montaje no tenga ningún cable eléctrico, caño de agua o de gas dentro de ella.
2. Elija un lugar apropiado cerca de un tomacorriente (120V, 60 Hz).
3. No lo instale cerca de la luz directa del sol, de una fuente de calor o en el exterior.
4. Seleccione un taladro adecuado para el tipo de material a perforar.
5. Mida y marque cuidadosamente la ubicación de todos los agujeros del soporte y luego haga las perforaciones y atornille el soporte de montaje a la pared.

Cómo Maximizar la Vida de sus Baterías de Ni-Cd

1. Cárguelas por un mínimo de 20 horas antes de usarlas por primera vez. El no hacer esto reducirá considerablemente la vida útil de las baterías.
2. **No guarde la unidad con el cargador conectado y enchufado.**
3. Cárguelas únicamente cuando las baterías estén completamente descargadas (o lo más cerca posible a completamente descargadas).
4. **No** las guarde en áreas de alta temperatura o humedad.
5. Descargue completamente la unidad y vuelva a recargarla por los menos una vez al mes.
6. Luego de guardarlo por tres (3) meses, deberá descargar completamente el producto y luego recargarlo para maximizar el poder de las baterías.
7. **Use únicamente** el cargador suministrado con el producto. Si utiliza otros cargadores, las baterías pueden llegar a fallar causando daños a las baterías, el producto o la propiedad privada.
8. Las baterías de Ni-Cd tienen una larga vida útil pero deberá reemplazarlas en cierto momento. Para comprar baterías de reemplazo, visite www.sharkvac.com.

Nota:

1. El botón de encendido deberá estar en la posición 'Off' (apagado) para cargar la unidad. Si la luz indicadora de carga no se enciende, presione una vez el botón de encendido.
2. Si nunca ha usado el producto, o estuvo guardado por mucho tiempo sin usarse, requerirá varios ciclos completos de carga y descarga para obtener el tiempo total de funcionamiento de su producto.

CUIDADO:

- **Use únicamente** la batería suministrada con la unidad.
- **No** intente remover la batería de la unidad para recargarla.

- Nunca arroje la batería o la unidad al fuego.
- **No** intente remover o dañar la cubierta de la batería.

LA BATERÍA DE "Ni-Cd" DEBE DESCARTARSE O RECICLARSE EN FORMA APROPIADA

Reemplazo y Desechado de las Baterías

ADVERTENCIA: **NUNCA** reemplace las baterías por pilas comunes ya que pueden perder y dañar la aspiradora. Use únicamente las baterías proporcionadas por ***EURO-PRO Operating LLC*** como repuesto.
Esta aspiradora contiene baterías de Níquel-Cadmio (Ni-Cd), las que deben reciclarse o desecharse de acuerdo con las reglamentaciones estatales, federales y locales. Llame a su centro de reciclado más cercano para obtener información acerca del desecho y reciclado de baterías de níquel-cadmio (Ni-Cd).
Si no está seguro de cómo extraer la batería, le sugerimos que lleve su aspiradora de mano a un técnico calificado en reparación de artefactos pequeños para que lo haga por usted.
Las baterías de su SV769 son reemplazables, sin embargo hay que tener cuidado al hacerlo. Siga los siguientes pasos cuando necesite reemplazar la batería.

1. Abra el compartimiento de las baterías quitando el tornillo Phillips ubicado en la hendidura de la parte de abajo de la unidad. **NUNCA** abra el compartimiento de la batería, excepto para reemplazarla cuando sea necesario.
2. Quite la tapa del compartimiento de las baterías. Deje la tapa y el tornillo a un lado.
3. Deslice el soporte de las baterías hacia la izquierda y sáquelo hacia arriba. (Fig. 2)

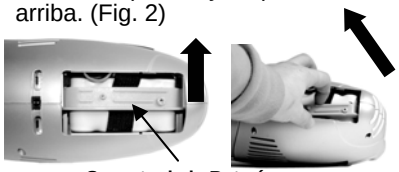

Fig. 2

4. Use la correa alrededor de la batería A) para quitarla. Quite la batería (B) del costado del compartimiento.
5. Desconecte cuidadosamente los dos (2) terminales eléctricos de las baterías tirando hacia fuera. (Fig. 3)
6. Vuelva a conectar los terminales haciendo coincidir el rojo con el rojo y el negro con el negro en la batería nueva.

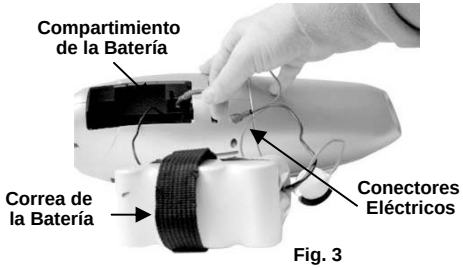

Fig. 3

7. Coloque la correa alrededor de la batería nueva (A).
8. Coloque primero las baterías (B) en la pared lateral, dentro del compartimiento de la baterías. (Fig. 4)

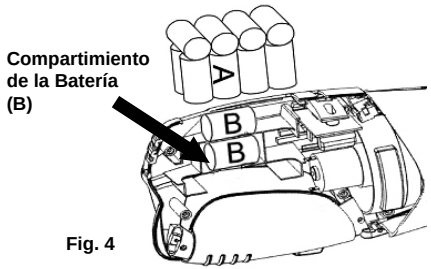

Fig. 4

9. Coloque los cables dentro del compartimiento de la batería para que no interfieran al colocar la tapa del compartimiento.
10. Ponga la batería (A) de costado y vuelva a colocarla en la unidad.
11. Vuelva a colocar el soporte de la batería dentro del compartimiento.
12. Vuelva a colocar la tapa poniéndola sobre las baterías e insertando la pestaña hacia el frente de la unidad, verificando que la parte de atrás se trabe en el cuerpo de la unidad.
13. Vuelva a colocar el tornillo de sujeción.

CUIDADO: NUNCA use la unidad sin tener la tapa del compartimiento de la batería colocada.
Nota: Cualquier otro mantenimiento debe ser realizado por un representante técnico autorizado.

Armado

Note: El filtro debe estar siempre instalado al usar la aspiradora.

1. Para abrir el recipiente de la tierra, presione el botón para destrabarlo y quite el recipiente. (Fig. 5)

Fig. 5

2. Verifique que el filtro esté instalado, luego vuelva a colocar el recipiente de la tierra. (Fig. 6)

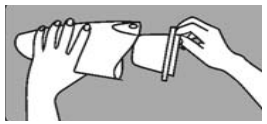
Fig. 6

3. Para instalar la boquilla esquinera o en la aspiradora, presione el accesorio dentro del orificio de succión delante del recipiente para la tierra. (Fig. 7)


Fig. 7

CUIDADO: El orificio de succión debe permanecer abierto, sin obstrucciones todo el tiempo. De lo contrario el motor puede recalentarse y dañarse.

Para Usar el Cepillo Eléctrico

1. Verifique que la aspiradora esté apagada.
2. Inserte firmemente el cepillo eléctrico (Fig. 8) dentro de la boquilla de succión del recipiente para la tierra asegurándose de que los contactos toquen las ranuras de conexión de la unidad. (Fig. 9)

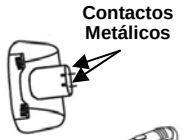

Fig. 8

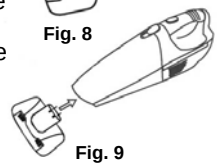
Fig. 9

Nota: Este cepillo eléctrico sirve para aspirar alfombras delgadas o tapetes.
ADVERTENCIA: **No toque el cepillo giratorio cuando se esté moviendo.**

Para Usar su Aspiradora Inalámbrica

1. Desenchufe la unidad del cargador.
2. Para encender la unidad, deslice la llave de encendido a la posición "On" (encendido).
3. Para apagar la unidad, deslice la llave de encendido a la posición "Off" (apagado).
4. Viene con una boquilla esquinera para limpiar lugares angostos y difíciles de acceder. Viene con un cepillo limpiador para limpiar tapizados, muebles, etc. Viene con un cepillo eléctrico para limpiar alfombras delegadas o muebles. Viene con un cepillo para limpiar alfombras y pisos.

Limpieza/Reemplazo del filtro

Para obtener el mejor rendimiento, vacíe el recipiente para la tierra y limpie el filtro luego de cada uso.

1. Para quitar el recipiente de la tierra, presione el botón para destrabarlo y quite el recipiente.
2. Quite el filtro.
3. Vacíe la tierra del recipiente. (Fig. 10)
4. Enjuague el filtro con agua fría, y déjelo secar completamente al aire antes de volverlo a colocar dentro del recipiente de la tierra. **No** lo coloque en una lavadora. No lo seque con un secador de cabello. **Séquelo al aire únicamente.**

Fig. 10

CUIDADO: El orificio de succión debe permanecer abierto, sin obstrucciones todo el tiempo. De lo contrario el motor puede recalentarse y dañarse.
Advertencia: Siempre vacíe el recipiente de la tierra y limpie el filtro antes de cada uso y durante usos prolongados. Nunca llene de más el recipiente para la tierra, quite la tierra y limpie el filtro frecuentemente durante uso prolongados o podría dañar el motor.
Si lava el filtro, asegúrese de que se haya secado completamente antes de colocarlo nuevamente en la aspiradora.
Observaciones: El filtro es lavable. Sin embargo, debe ser reemplazado cada tres (3) a seis (6) meses, dependiendo del uso, para asegurar el óptimo rendimiento de su aspiradora.

INSTRUCCIONES DE USO

GUÍA PARA EL DIAGNÓSTICO DE PROBLEMAS

PROBLEMA	POSIBLE CAUSA	POSIBLE SOLUCIÓN
LA ASPIRADORA NO FUNCIONA	1. Batería descargada. 2. El tomacorriente donde enchufa el cargador no funciona.	1. Recargue la unidad. 2. Verifique el fusible o la llave general. Reemplace el fusible/encienda la llave general.
NO LEVANTA LA TIERRA O LA SUCCIÓN ES MUY DÉBIL.	1. Recipiente para la tierra está lleno. 2. El filtro necesitan limpieza o reemplazo. 3. La unidad necesita una recarga.	1. Vacíe el recipiente para la tierra. 2. Quite el filtro y verifique que no haya nada tapando el conducto del aire. Limpie o reemplace el filtro. 3. Recargue la unidad.
CEPILLO ELÉCTRICO NO FUNCIONA	1. Los 2 terminales metálicos del cepillo no hacen contacto con el cuerpo de la aspiradora. 2. El cepillo está atascado.	1. Inserte firmemente el cepillo en la boquilla de la aspiradora. Esto conectará el cepillo eléctrico con la fuente de alimentación de la unidad. 2. Quite toda la pelusa, cabellos, etc. del cepillo.
SALE TIERRA DE LA ASPIRADORA	1. Recipiente para la tierra está lleno. 2. El filtro no está instalado correctamente. 3. Hay un agujero en el filtro o está roto.	1. Vacíe el recipiente para la tierra. 2. Repase las instrucciones de instalación del filtro. 3. Reemplace el filtro.

PARTES DE REPUESTO PARA EL MODELO SV769

Filtro de Repuesto SKU# XF769
Batería de Repuesto SKU# XB768

Para ordenar filtros o baterías de repuesto o para soporte técnico:
Llame al: 1 (866) 826-6941
de Lunes a Viernes de 8:30 AM hasta 5:00 PM Eastern Standard Time
o
visite nuestro sitio de Internet: www.sharkvac.com

Observaciones: El filtro es lavable. Sin embargo, debe ser reemplazado cada tres (3) meses para asegurar el óptimo rendimiento de su aspiradora.

Importante: **Asegúrese de que el filtro esté completamente seco al aire antes de volverlo a instalar en la aspiradora de mano.**

Modelo SV769

EURO-PRO

GARANTIA LIMITADA DE UN (1) AÑO

EURO-PRO Operating LLC garantiza este producto contra defectos de materiales y mano de obra por un término de un (1) año a partir de la fecha de compra original, siempre que sea utilizado para uso doméstico normal, sujeto a las siguientes condiciones, exclusiones y excepciones.
Si su artefacto no funciona correctamente al utilizarlo bajo condiciones domésticas normales dentro del período de garantía, devuelva el artefacto completo y los accesorios. Por servicio al cliente, llame al 1 (866) 826-6941 o visite nuestro sitio web www.sharkvac.com.
Si el artefacto presenta un defecto de materiales o mano de obra, ***EURO-PRO Operating LLC*** lo reparará o remplazará sin cargo. El envío debe incluir un comprobante de la fecha de compra y $5.95 para cubrir los gastos de envío. *
Los insumos tales como, sin limitación, filtro, cepillo y partes eléctricas que normalmente necesitan ser reemplazados son explícitamente excluidos de la garantía.
La responsabilidad de ***EURO-PRO Operating LLC*** se limita únicamente al costo de reparación o reemplazo de la unidad, a nuestro criterio. Esta garantía no cubre el desgaste normal de las partes y no cubre ninguna unidad que haya sido alterada o utilizada con fines comerciales. Esta garantía limitada no cubre daños ocasionados por uso inadecuado, abuso, negligencia o daños causados por embalaje inapropiado o maltrato durante el transporte. Esta garantía no cubre daños o defectos causados o resultantes durante el transporte para su reparación o alteraciones del producto o cualquiera de sus partes, realizadas por una persona no autorizada por ***EURO-PRO Operating LLC***.
Esta garantía es válida para el comprador original del producto y excluye cualquier otra garantía legal y/o convencional. La responsabilidad de ***EURO-PRO Operating LLC***, de existir, se limita a las obligaciones específicas asumidas expresamente bajo los términos de esta garantía limitada. **Bajo ninguna circunstancia *EURO-PRO Operating LLC*** será responsable por daños incidentales o indirectos de ninguna clase. Algunos estados no permiten la exclusión o limitación de daños consiguientes o incidentales, por lo tanto lo anterior puede no ser válido para usted.

Esta garantía le otorga derechos legales específicos, y usted puede también tener otros derechos los que varían de estado a estado o de provincia a provincia.

***Importante**: **Embale el producto cuidadosamente para evitar daños durante el transporte. Asegúrese de incluir un comprobante de la fecha de compra y de colocarle una etiqueta al producto con su nombre, dirección completa y número de teléfono, una nota proporcionando información de la compra, número de modelo y una descripción del problema. Le recomendamos asegurar el paquete (puesto que la garantía no cubre daños de envío). Escriba en el exterior del paquete "ATTENTION CUSTOMER SERVICE". Nosotros nos esforzamos constantemente en mejorar nuestros productos, por lo tanto las especificaciones aquí indicadas pueden cambiar sin previo aviso.**

TARJETA DE REGISTRO DEL CLIENTE
SÓLO PARA CONSUMIDORES CANADIENSES

Complete y envíe la tarjeta de registro del producto dentro de los diez (10) días posteriores a la compra. El registro nos permitirá contactarnos con usted en caso de existir alguna notificación de seguridad con respecto al producto. Retornando esta tarjeta usted reconoce haber leído y entendido las instrucciones de uso y advertencias incluidas en estas instrucciones.

ENVIAR A *EURO-PRO Operating LLC*, 4400 Bois Franc, St. Laurent, QC, H4S 1A7

SV769
Modelo del Artefacto

Fecha de compra **Nombre del Negocio**

Nombre del Dueño

Dirección **Ciudad** **Provincia** **Código Postal**

Impreso en China